

Miniguide US –Quick Reference

Reset Defaults: Insert battery backwards briefly or remove battery for 2 minutes.

Turn on, hold button:

# Pulses	Settings
1	4 meter
2	2 meter
3	1 meter
4	Half meter
5	8 meter

Lock/unlock	Turns on Advanced Settings
6	1 preset, default
7	2 presets
8	3 presets
9	Chirp audio, default
10	Sweep audio
11	Vibration on when audio on, default
12	Vibration off when audio on
13	Disables remote switch, default
14	Enables remote switch
15	4 meter gap finding
16	2 meter gap finding
17	1 meter gap finding